


HORNBLASTERS.COM

5 Gallon Dual Conductor's Special Installation Diagram

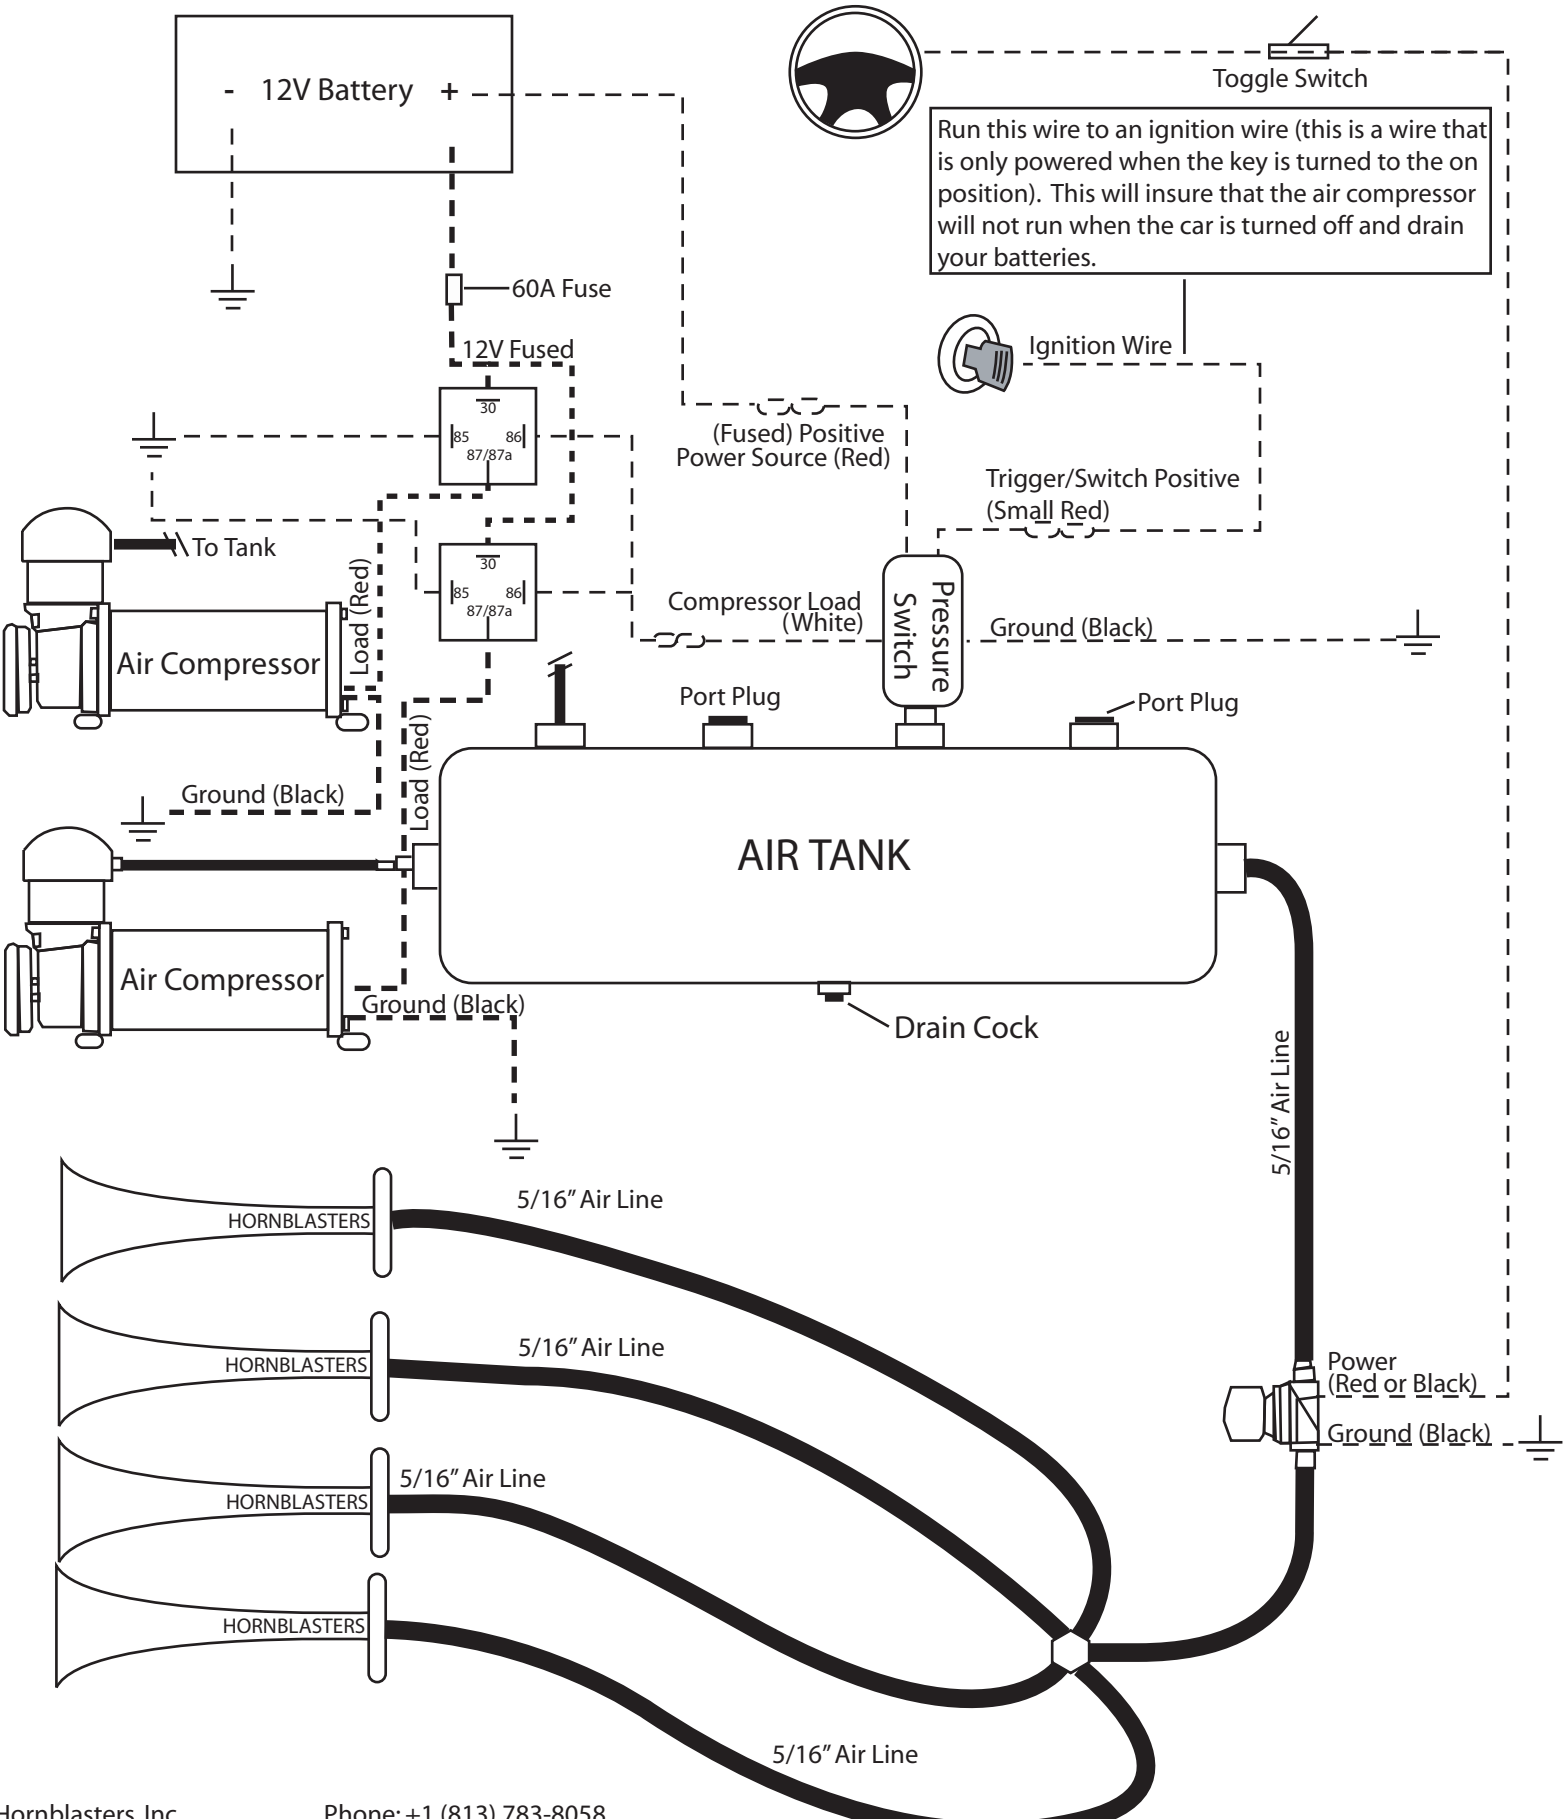

Run this wire to an ignition wire (this is a wire that is only powered when the key is turned to the on position). This will insure that the air compressor will not run when the car is turned off and drain your batteries.